
 
 




 
 

 
 

 



**Symbols**

-  Pressure Relief Valve
-  Balance Valve
-  Union
-  Air Vent
-  Pump
-  Backflow Preventer
-  Strainer
-  Flexible Fitting
-  Mixing Valve
-  Ball Valve
-  Expansion Vessel
-  Check Valve
-  Injection Tee
-  Motorized Valve

**Notes:**

- 1) Final pump skid design subject to change.
- 2) Pipe flow velocity not to exceed 2 ft./sec. Use 1 ¼" copper pipe for Aegis 250 and 350 and 1 ½" copper pipe Aegis 500 between heat pumps and skids.
- 3) Air vent must be installed at the highest point in the plumbing. Manual shut off valve recommended below air vent.
- 4) PRV must be piped within 18" of floor or per plumbing code.

		Fort Worth, TX 76134 Blauvelt, NY 10913	
<b>MIIS 1 Aegis Water</b>			
DRWN. BY	DATE	DWG. NO:	REV.
BJC	03/27/23	SD-L-1320	<b>A</b>
Page 1 of 46			