

## User Manual

---

# TempTrac<sup>®</sup>

Water Heater Electronic Controller

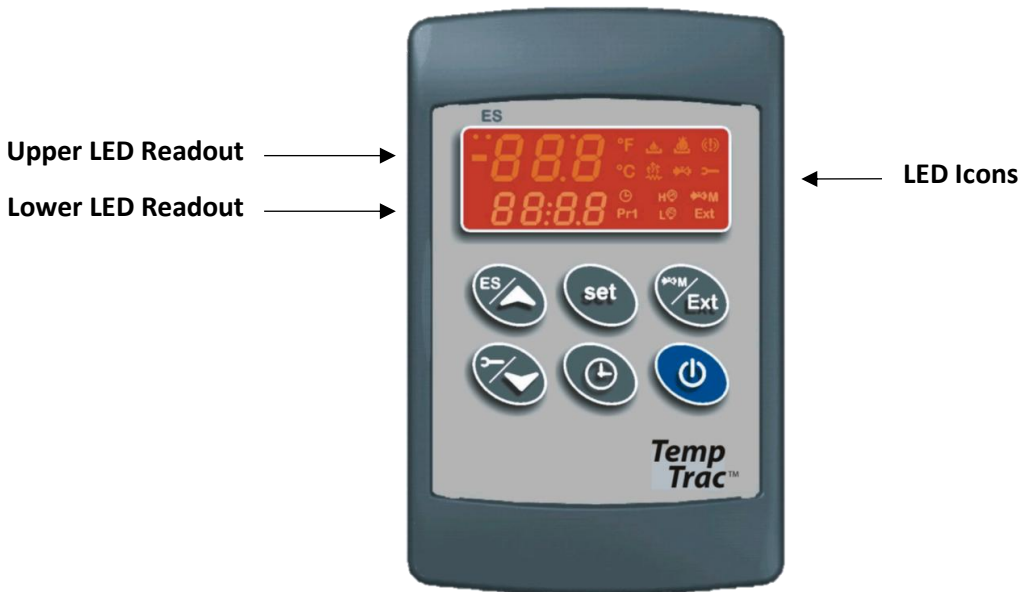


### Disclaimer







The information contained in this document is subject to change without notice from Watts Heating and Hot Water Solutions LLC dba Lync by Watts ("Lync"). Lync makes no warranty of any kind with respect to this material, including, but not limited to, implied warranties of merchantability and fitness for a particular application. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply. Lync is not liable for errors appearing in this document, not for incidental or consequential damages occurring in connection with the furnishing, performance, or use of these materials.






1. DISPLAY AND INTERFACE






 




 
 
 




**Keyboard Buttons**

-  **SET:** Displays and modifies the temperature set points. In programming mode, it selects a parameter or confirms an operation.
-  **UP:** Displays and modifies the energy saving (Night Time setback) settings. In programming mode, it browses the parameter codes or increases a displayed value
-  **DOWN:** Displays the working hours of the load relays. In programming mode, it browses the parameter codes or decreases a displayed value.
-  **CLOCK:** Changes the lower display from the Probe temperature to current time and vice versa. To set the current time and day.
-  **EXT:** Changes upper display between Probe 1, 2 and 3 temperatures, modulation % or temperature difference between Probe 1 and 2. In programming mode it sets the 4-20mA output (Paskey is required).
-  **ON/OFF:** Switches the control ON or OFF.

**Key Combinations**

-  To lock and unlock the keyboard.
-  To enter programming mode.
-  To exit programming mode.

### LED Icon Legend

LED	MODE	Function
°F	ON	Temperatures are displayed in degrees Fahrenheit
°C	ON	Temperatures are displayed in degrees Celsius
	Flashing	Call for heat time delay or remote enable/disable is in standby (disabled)
	ON	Call for heat is on
	Flashing	Second stage time delay <i>(On 2-stage units only)</i>
	ON	Second stage on or the <b>AL2</b> alarm output is enabled.
	Flashing	Output 3 time delay
	ON	Output 3 relay on
	ON	Modulation output signal is in manual control mode or forced to the <b>i1S</b> setting by digital input 1
	ON	Modulation output signal is automatically controlled by temperature probe 1
	Flashing	Modulation output time delay is activated.
Ext	ON	Probe 3 is displayed
	FLASHING	Digital input 2 (alarm) is activated
	FLASHING	Digital input 3 (alarm) is activated
	ON	Lower display is displaying the time
	FLASHING	Alarm signal
	FLASHING	Programmed working hours limit is exceeded
	ON	Working hours are displayed in Lower LED readout
ES	ON	The energy saving function is running

### Upper LED Readout

The default display of this readout is the temperature sensed at Probe 2. Probe 2 may display the tank stored water temperature, outlet water temperature, flue gas temperature, ambient temperature, remote tank or blended water temperature, etc., depending on the product and application. Refer to your specific water heaters Installation and Maintenance Manual and the supplied wiring drawing. The upper LED readout can also be switched to display Probe 1 or 3 (if used) or the modulation % or the temperature difference between Probe 1 and 2. If Probe 2 is not utilized, the display will show “nu”.

Pressing and releasing the **EXT** button will cause the Upper LED to display the actual temperature sensed at Probe 3. Probe 3 (if used) may display the flue gas temperature or outside ambient temperature, etc., depending on the product and application.

Pressing and releasing the **EXT** button again will cause the Upper LED to display the modulation % (indicated by 0 to 100%). If the product is non-modulating, the displayed value should not be considered.

Pressing and releasing the **EXT** button a third time will cause the Upper LED to display the difference between the temperature sensed at Probe 2 (if used) and the temperature sensed at Probe 1.

To return to the default in the Upper LED readout, press the **EXT** button to cycle back to the Probe 2 temperature. The above display information is available for monitoring through the optional MODBUS RTU interface.

### Lower LED Readout

The default display of this readout is the temperature sensed at Probe 1. Probe 1 will be inserted into the appropriate area of the storage tank to provide effective temperature response for the heat source (this may not be at the top of the tank). Refer to your specific water heaters Installation and Maintenance Manual and the supplied wiring drawing. The lower LED readout can also be switched to display Probe 2 or 3 (if used) or the modulation % or the Time of Day.

By pressing and releasing the button once, the Lower LED display will show the Time of Day. Press again to return to default display.

### Setting Current Time and Day (Military Time)

---

1. Push and hold the **CLOCK** button for ~ 3 seconds. The LED icon starts flashing and the “Hur” (hour) parameter name is displayed in the Upper LED readout, its value is displayed in the Lower LED readout.
2. Pushing the or button alternates the LED readouts between the following:  
“Hur” (hour) in the Upper readout and its value in the lower readout  
“Min” (minute) in the Upper readout, its value in the Lower readout  
“dAY” (day) in the Upper readout, its value in the Lower readout
3. To adjust a value, press the **SET** button and the value in the Lower LED will start flashing. Change the value by pressing the **UP** or **DOWN** buttons. When correct, press **SET**.
4. To exit push **SET + UP** or wait 15 seconds without pressing any buttons.  
**NOTE:** This device recognizes Sunday as the first day of the week and Saturday as the last.

### Setting Energy Saving Time (Nighttime Setback)

---

1. Push and hold the **UP** button for ~ 3 seconds and the first parameter of the energy saving will be displayed.
2. Use the **UP** or **DOWN** buttons to browse them.
3. To change a value, push the **SET** button followed by **UP** or **DOWN** and then the **SET** button again.
4. To exit from the menu press **SET** and **UP**, or wait for 30 seconds.

### Setting Modulation Parameters

---

1. Push and hold the **EXT** button for ~ 3 seconds and the LED will switch ON and a passkey will be required to view and manually change the modulation % value. Passkey is “321”.
2. Upon entering the password, the modulation % value will be displayed in the lower display.
3. To manually adjust this value, push the **SET** button; the value will start flashing. Adjust it by using the **UP** or **DOWN** buttons and then the **SET** button again.
4. To exit from the menu press **SET** and **UP**, or wait for 30 seconds.

## 2. PROGRAMMING

### Setpoint Descriptions and Programming

Setpoints are those temperature or operating parameters that the user can adjust.

**St 1** - This setpoint temperature should be considered the °F or °C temperature threshold to activate the energy source. The setpoint corresponds directly to the temperature sensed by probe 1. The St 1 setpoint is programmed as an absolute temperature; for example 120°F.

**St 2** - This setpoint corresponds to either the threshold for second-stage burner operation or an ancillary device such as a pump. The St 2 setpoint is either programmed as the number of degrees below St 1 (setpoint 1) when the second stage will activate; for instance, - 8°F OR as an independent; for instance 115°F. The St 2 setpoint is only applicable on products that have stage-fired/modulating burners or ancillary components such as circulation pumps.

**St 3** - This setpoint represents the temperature threshold for activation of freeze protection or flue gas temperature protection, depending on the product or application. The St 3 setpoint is programmed as an absolute temperature; for example 40°F or 150°F. The St 3 setpoint is only applicable on products that have freeze protection or require flue gas temperature protection.

To program different set points:

1. Press the **SET** button, the Upper LED readout will display the “St1” parameter name, while the Lower LED readout will show the corresponding value.
2. Use the **UP** or **DOWN** buttons to cycle the Upper LED readout through the St1, St2 and St3 parameter names. On some products St2 and St3 will be located in the PR2 menu and require password access.
3. Press the **SET** button to modify a parameter value. The value starts flashing in the Lower LED readout.
4. To change it, press the **UP** or **DOWN** buttons.
5. Press the **SET** button to confirm the value and pass to the setting of next set point.
6. Repeat the operations described at point 3, 4, 5.
7. To exit, press **SET** and **UP**, or wait for 15 seconds without pressing any button.

**NOTE:** Each point has a time out of 15 seconds. If no key is pushed within 15 seconds, the controller exits the set points programming procedure. The set value is stored even when the procedure exits due to the 15 second expiration.

### Locking the Keyboard

1. Push and hold the **UP** and **DOWN** keys for ~ 3 seconds.
2. The “POF” message is displayed and the keyboard is locked. At this point it is only possible to view the set point.
3. Repeat step 1 to unlock the keyboard.

### Hot Key Programming (For Factory Supported Field Reprogramming)

To upload a program from a control to a HOT KEY:

Insert HOT KEY into the TTL connection ON the back of the control. Press and hold the **UP** and **DOWN** keys momentarily then press the key. The “Upl” message will appear while uploading is occurring and the “End” message will appear when finished. Push any key to return to normal operation.

To download a program from a HOT KEY to a control:

Press the **ON/OFF** key to turn off the control. Insert the HOT KEY into the TTL connection on the back of the control. Press the key again and downloading will begin. The “don” message will appear while downloading is occurring and the “End” message will appear when finished. Push any key to return to normal operation.

---

### **Assigning Temptrac Address For Modbus-RTU**

The first step to interfacing a BAS (Building Automation Control) with a water heater or group of water heaters will be the assignment of the address number for each heater.

1. Enter the Programming mode by pressing the **SET** and **DOWN** OWN key for 3 seconds (lead with the SET key).
2. Press the **DOWN** key.
3. Select **Pr2 – PAS** parameter and press the **SET** key. The value “0 - -” with a flashing zero is displayed.
4. Use **UP** or **DOWN** keys to input the Passkey; confirm the figure by pressing “SET”. The Passkey is “321”.
5. Once you have entered the Pr2 menu press the **DOWN** key three times and the parameter **Adr** appears.
6. Now press the SET key once and the number will begin to blink. Use the arrow key to set the address. Each TempTrac on a RS-485 network must have a different address
7. Each water heater should be assigned a different address for proper communication to occur.

**NOTE:** The default for each TempTrac is Address #1. You can assign them to any number in the range of 1-247.

### 3. ALARMS

Alarm messages are displayed in the upper LED readout and alternate with the default display. An alarm LED icon is also illuminated.

MESSAGE	CAUSE	RESULTS OF ALARM CONDITION
"P1"	Probe 1 failure	Call for heat and burner second stage interrupted; modulation output % will be the PP4 parameter (generally low fire)
"P2"	Probe 2 failure	Output 3 is open
"P3"	Probe 3 failure	Dynamic reset of Set1 disabled. Outdoor reset is disabled (if used) or Flue gas temperature protection is disabled (if used)
"HA"	High temperature limit setpoint exceeded	Audible alarm sounds, operation continues.
"LA"	Low temperature alarm	Audible alarm sounds, operation continues.
AL1	Digital input 1 alarm	Unit de-energized after timer delay. Audible alarm sounds.
AL2	Digital Input 2 is activated for one or more of the conditions listed in section 3.1 .	Unit de-energized after timer delay. Audible alarm sounds. Alarm contacts close for remote indication of alarm. Internal alarm register will communicate an alarm condition though the Modbus RTU communication link.
AL3	Digital Input 3 is activated for one or more of the conditions listed in section 3.1	Unit de-energized after timer delay. Audible alarm sounds.
Mn1	Maintenance alert for call-for-heat	Audible alarm sounds, operation continues
Mn2	Maintenance alert for second stage	Audible alarm sounds, operation continues
Mn3	Maintenance alert for freeze protection	Audible alarm sounds, operation continues
"rtc"	The real time clock has lost its setting	Energy saving functions disabled

#### Audible Alarm

The TempTrac audible alarm is activated each time a connected alarm condition occurs. The following are representative alarm conditions that may be connected to and activate the TempTrac audible alarm (some alarms may be connected to and operate separately from the TempTrac on some products).

- High/low water temperature alarm
- Probe failures
- External thermostat limit failure
- Flame Failure
- High and low gas pressure
- Low water

The audible alarm is silenced by pressing any button (alarm condition still present)

#### Alarm Recovery

1. Probe failure alarm ends after normal operation is re-established. Check connections before replacing the probe.
2. Temperature alarms "HA" and "LA" automatically stop as soon as probe 1 senses temperatures within normal operating parameters.
3. Digital input 2 & 3 alarms recover when condition(s) listed above are normalized and any button is pressed (if used). Resetting the alarm condition may require resetting individual safety devices or cycling main power switch.
4. RTC alarm stops after programming the real time clock.
5. RTF alarm requires the replacement of the real time clock.

